

CARE & USE OF GME TX670 RADIO



GME TX670 radio

Features:


- 40 Channels
- 38 CTCSS privacy codes
- Auto Power Save
- Keypad Lock
- Operating Time: 10hrs
- 3 x Ni-Mh size 'AA' batteries



MPTT


- 18mm button
- 650mm to 1300mm coiled cable
- Twin 2.5mm & 3.5mm right angle plug connector into side of radio
- 360 degree swivel belt clip

CONTROLS

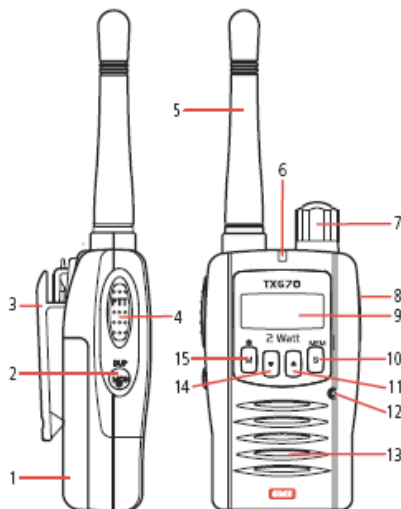

- | | |
|-----------------------------|------------------|
| 1 Battery Compartment | 9 LCD Display |
| 2 Duplex/Monitor Key | 10 Scan/Memory |
| 3 Belt Clip | 11 Channel Up |
| 4 Push-To-Talk (PTT) Switch | 12 Microphone |
| 5 Antenna | 13 Speaker |
| 6 Indicator LED | 14 Channel Down |
| 7 Volume On/Off | 15 Mode/Lock Key |
| 8 External Speaker/Mic | |

LCD INDICATORS

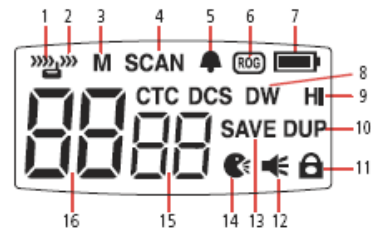

- Receiver Busy Icon: Appears when receiving.
- Transmit Icon: Appears when transmitting.
- Memory Icon: Appears when the selected channel is stored in the Scan memory.
- Scan Indicator Icon: Appears when SCAN is enabled and the radio is scanning.
- Button Beep Tone Icon: Appears when the button beep confirmation tone is selected.
- Roger-Beep Tone Icon: Appears when the Roger-Beep tone is enabled.
- Battery Level Icon: Indicates battery charge level. Flashes when battery is almost empty.
- Dual Watch Icon: Appears when Dual Watch mode is active.
- High Power Icon: Appears when High transmitter power is selected.
- Duplex Icon: Indicates that Duplex communication has been enabled.
- Key-Lock Icon: Appears when the keypad is locked.
- Monitor Icon: Appears when Monitor function is activated.
- Power Save Icon: Appears when the radio is in the power save mode.

Turn on TX670 radio by turning the volume control on. The Channel and CTC code should be set at 29 - 25. The lock icon should be shown in the LCD display. The unit is ready to go.

To change the Channel or CTCSS code hold down the M button until it 'beeps' and the lock icon disappears. Press the arrow keys to change the Channel. Press the Mode button and the CTCSS display will flash. Use the arrow keys to change. After five seconds the settings will be automatically saved. Hold down the M button until the lock icon appears. To adjust the volume turn the volume button.

Connect MPTT cable to the radio.

Place Radio into Rubber Glove (to prevent damage from moisture), then into pouch on belt.

Clip MPTT button onto belt.

Connect RK Headset into MPTT, ensuring it clicks firmly into place. Release button on RK Headset connector should be same side as MPTT button.

Clip Airtube onto jumper or other clothing and insert into ear. Secure with tape if necessary.

Thread microphone up front of jumper with lead through the v-neck of the collar. Do up the bottom button keeping the cable below this, then clip microphone above button. This ensures microphone receiver is upwards and in best reception position.

To operate, press button, pause 1 second to ensure transmitting mode is connected, then speak clearly. Give short commands and repeat twice e.g. "forward, forward" for a forward pass. Once you have got the referees attention, then it is possible for longer conversations. Release the button after you have finished talking.

At completion of game/s, remove radio from rubber glove. Moisture can cause damage to the radio if not 'aired' out correctly.

Turn off radio by turning off the volume control.

DO NOT LEAVE BATTERIES IN UNIT WHEN NOT IN USE