

# CARE & USE OF UNIDEN UH-042 RADIO



## Uniden UH-042 radio

### Features:

- 40 Channels
- 38 CTCSS codes
- Keypad Lock
- Operating Time: 10hrs
- 3 x 'AA' batteries



## MPTT

- 18mm button
- 650mm to 1300mm coiled cable
- Twin 2.5mm & 3.5mm vertical plug connector into top of radio
- 360 degree swivel belt clip


To Operate, turn on Radio. Use up & down arrow buttons to select channel.


### Programming CTCSS Code

1. Select a desired channel to be used with CTCSS.
2. Press and hold [CTCSS] for 1.5 secs. CTCSS code indicator blinks.
3. Press [▲] or [▼] to select the desired CTCSS code.
4. Press [CTCSS] to save the selected code.  
CTCSS icon stops blinking.



*NOTE: There are 38 available CTCSS tone per channel. Channel 5 and 11 should not be programmed CTCSS. These channels shall be used for emergency purposes only and must be 'OPEN' at all times.*

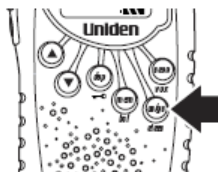

Press **dup**  button to lock keypad. Test and Adjust volume before inserting radio into pouch.

Connect MPTT cable to the radio.

**Place Radio into Rubber Glove (to prevent damage from moisture), then into pouch on belt.**

Clip MPTT button onto belt.

Connect RK Headset into MPTT, ensuring it clicks firmly into place. Release button on RK Headset connector should be same side as MPTT button.

**DO NOT LEAVE BATTERIES IN UNIT WHEN NOT IN USE**